

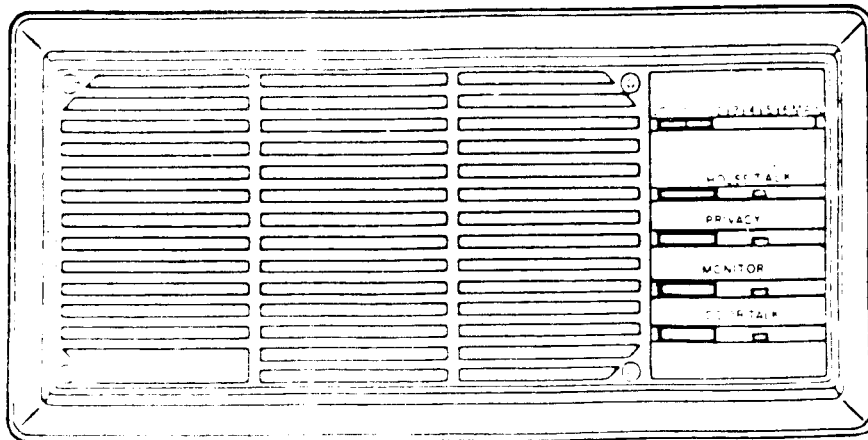


# VALET


## MINI INTERCOM SYSTEM.

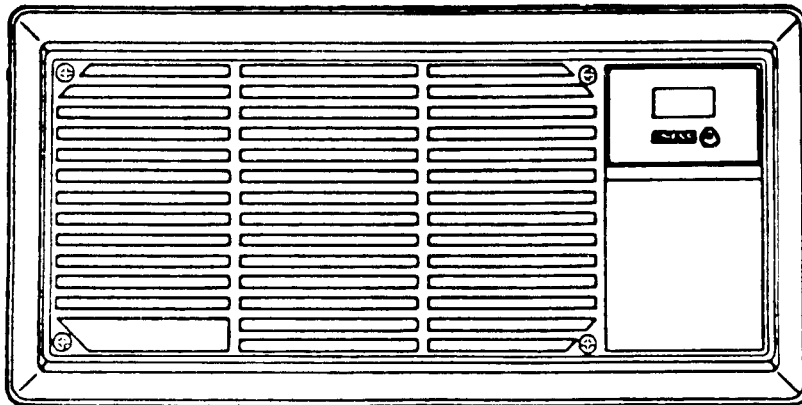

## FRONT DOOR STATION INTERNAL PRE SET CONTROLS

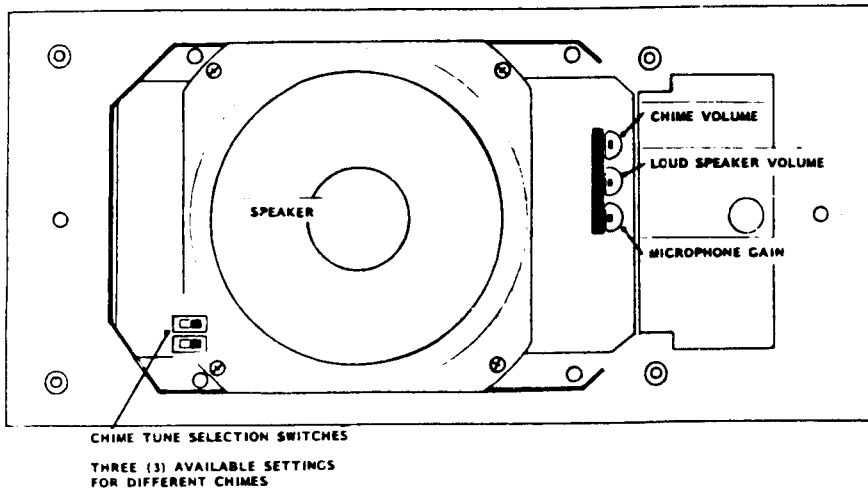


## ROOM STATION INTERNAL PRE SET CONTROLS

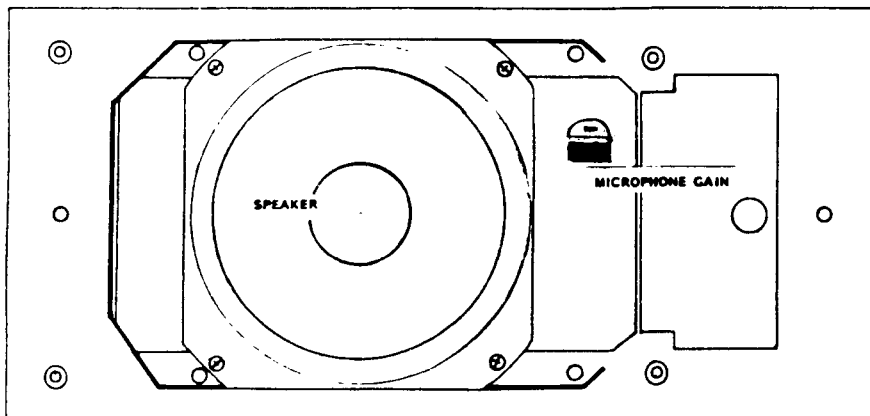

## WIRING INSTRUCTIONS


- Wiring is as shown in the diagrams. However, the plug pack (12V DC) power supply may be fitted to a room station if it is impractical to fit it to a door station.
- Figure 8 cable must be used in conjunction with the Valet cable if a door latch is to be connected.
- If more than seven stations are to be used, then an additional plug pack will be required. However, any additional plug packs must be isolated from each other. (Contact your Dealer for further information).

MINI INTERCOM

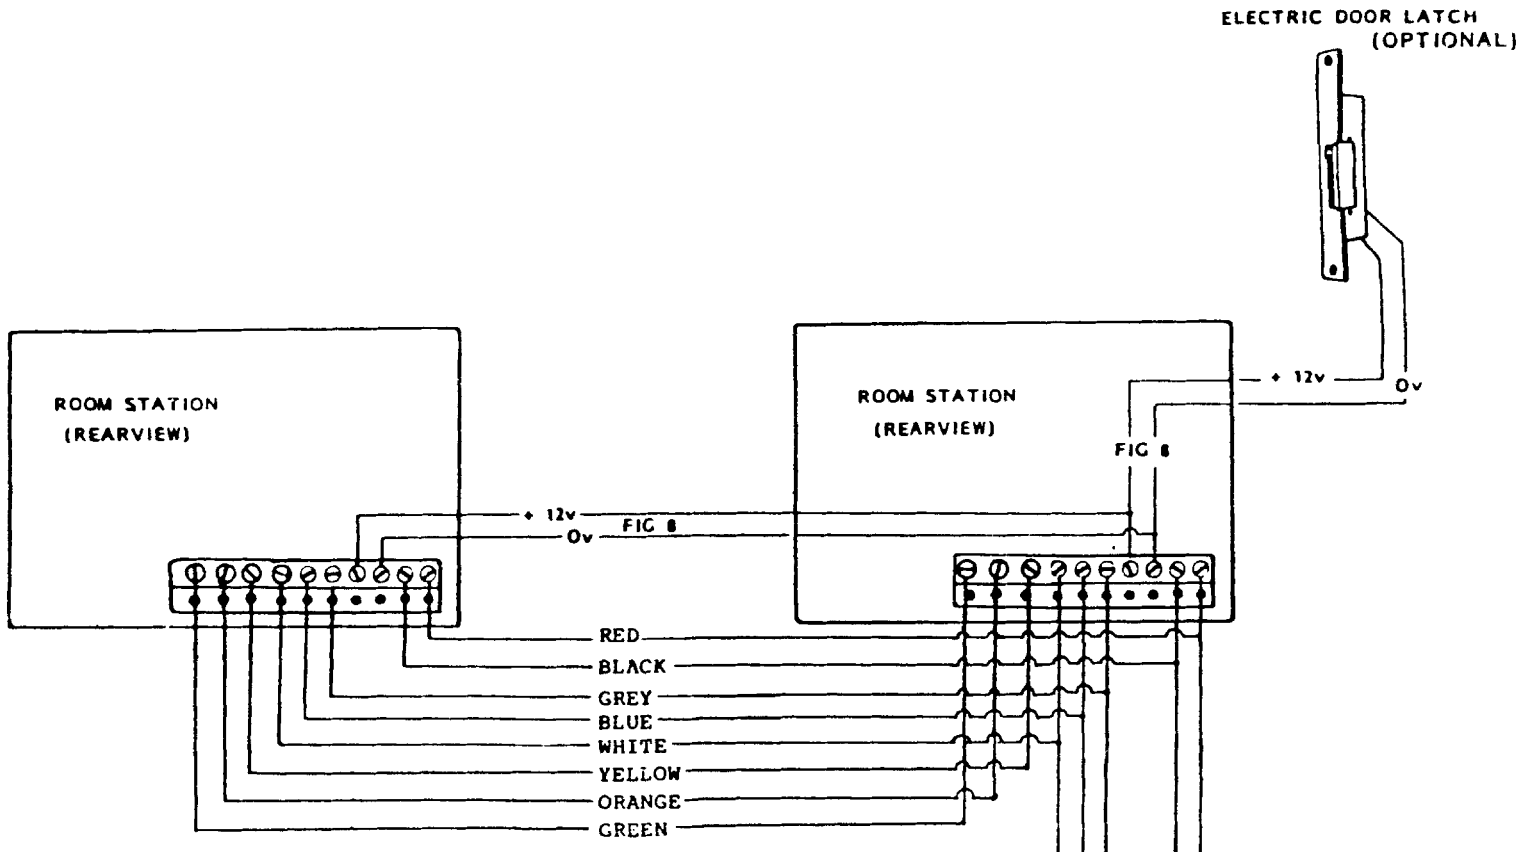

CAUTION: Failure to use specified wire may cause hum and/or noise in the system.

IMPORTANT: Valet cannot be responsible for improper system operation that results from improper wire use or interference generated by light dimmers, fluorescent lighting fixtures and similar electrical products, such interference must be corrected at the source. As an aid to help reduce this interference, all system wires and cables must be placed at least 12 inches from any A.C. power wiring.

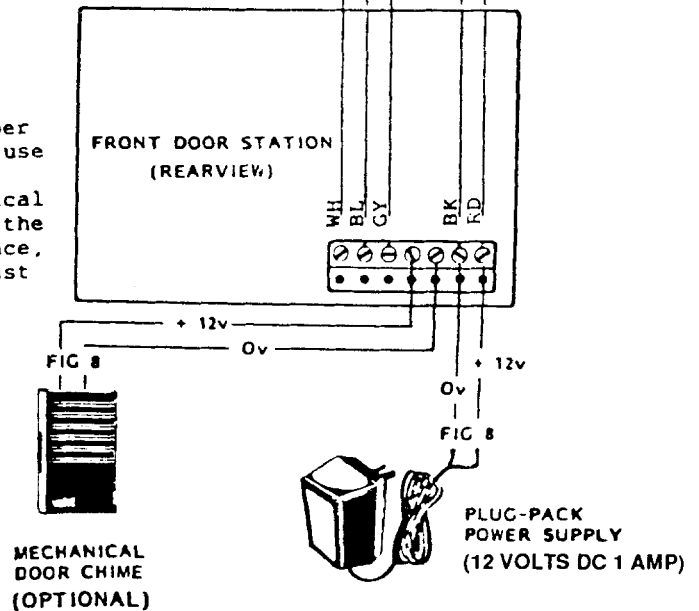

- Press DOORBELL button.
  - Chime is heard at all stations
  - Chime can be changed by selection switches located in the lower left hand corner of the door station.

### ROOM STATION

#### To answer the Door Station

- Press "DOOR TALK" and hold at any room station.
- Speak into room station.
- Release "DOOR TALK".
- The door station's microphone is now activated for ten (10) seconds.
- You can now hear the person at the door station.
- To continue the conversation, just press "DOOR TALK" when you wish to be heard and release "DOOR TALK" when you wish to hear the person at the door.

NOTE: The conversation will be heard at all stations.

#### To talk to someone in the house

- Press "HOUSE TALK" and hold down.
- While holding in "HOUSE TALK" you can speak to all other room stations except the door station(s).
- Release "HOUSE TALK" to activate the microphones in all the other room stations.
- Any person in the house can now talk back to you "Hands Free" i.e. without having to press any buttons.
- To continue the conversation, just press "HOUSE TALK" when you wish to be heard and release "HOUSE TALK" when you wish to hear the other person(s).

### MONITOR

The monitor facility can be used for a variety of functions.

eg. listening to sleeping babies  
 keeping an ear on the children etc.

- To use this facility, simply press the button marked "MONITOR" in the room you wish to listen to.
- This will allow you to listen to the room from any other room station in the house.

NOTE: You can not monitor a station in the "PRIVACY" mode.

## **PRIVACY**

The privacy facility is used to prevent anyone from eavesdropping on a particular room station. By pressing the "PRIVACY" button on a room station it effectively cuts out the microphone at that room station.

NOTE: With privacy on, you are still able to receive calls and hear the door chime.

## **DOOR LOCK**

- To activate the door lock mechanism (if fitted), press "PRIVACY" and "MONITOR" together.

---

# VALET

---

Central Vacuum  
Intercom  
Security  
Automation

---

[www.valet.com.au](http://www.valet.com.au)

---

SALES - SERVICE - SPARES

☎ 1800 050 333

NESS HEAD OFFICE

☎ 02 8825 9222

---

**iCentral**<sup>TM</sup>  
Intelligent Central Systems  
A DIVISION OF **NESS** CORPORATION

This manual is provided as a customer service for obsolete products which can no longer be repaired.

© 2010 Ness Corporation